



# How to self-administer your at-home rapid antigen test

For more information, contact  
Skylar Carlson, Pandemic Coordinator  
(807) 275-6574  
skylarc@7generations.org



## Step 1

Insert swab into each nostril about one inch deep and swirl five times




## Step 2

Insert the swab into the prepared tube



## Step 3

Swirl the swab tip in the buffer fluid for 15 seconds

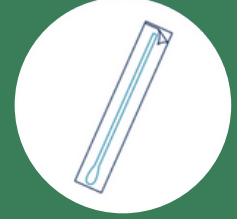

## Step 4

Remove the swab from the vial and place swab in packaging



## Step 5

Place the lid on top of the vial to create a dropper



## Step 6

Invert the dropper and put three drops into the testing device well



## Step 7

Set a timer for 15 minutes



## Step 8

After 15 minutes, check the device for your test result

One red line = negative  
Two lines = presumed positive



## Step 9

Using a marker or pen, write today's date on the test device



## Step 10

Take a photo of your test result and upload it to SGEL's screening tool



## Step 11

Dispose of all used test materials in the garbage



## Step 12

Negative: you may proceed to campus.  
Positive: do not come to campus, contact SGEL's Pandemic Coordinator.  
Unsure: complete another test.